



# OCULAR LTE USER MANUAL

OC20-BA-7.2kW-A / OC20-BC-7.2kW-A  
OC20-BA-22kW-A / OC20-BC-22kW-A

[ocularcharging.com.au](http://ocularcharging.com.au)  
[sales@ocularcharging.com.au](mailto:sales@ocularcharging.com.au)  
1300 912 650

# How to charge - LTE

## 1 Starting a charging session

**LTE socket model:** Grab a charging cable and plug each end into their respective ports.

**LTE tethered model:** Plug the attached charging cable into your car port.

## 2 Stopping a charging session

The charging sessions can be terminated either by the car or the charger.

- To stop charging via the car please consult your car manual.
- To stop charging via the charger, simply remove the charging plug from the port

## 3 Changing the charging speed

Before plugging the charging cable into the car, press the silver button on the right side of the charger to adjust the charging speed.

# How to program output current

## 1 Current Selection Mode

Press the silver button on the right hand side of the charger 3 times within 10 seconds. This must be done within 60 seconds after restarting the charging unit.

*Please note that after 60 seconds from restarting, the charging unit will continue with its normal booting process. Restart again if the button is not pressed in this time.*

## 2 Charging Current display

The LCD display will automatically switch to a new screen in this mode. It will display the set output current. To change the set output current, press the silver button until you reach the required Amperage. It will start at 32 Amps, and will go down to 6 Amps before returning back to 32 Amps.

*The current will be changed in 1 Amp intervals.*

## 3 Finalising new charging limit

In order to finalise the new output current, once you have selected the required Amperage in Step 2, leave the charger for 20 seconds until it reboots.

*Please note: the new output current will be set on the charger and will not need to be reset each time the charger is rebooted.*

OCULAR

CHARGE WITH VISION