



## OCULAR LTE USER MANUAL

# How to charge - LTE

## 1 Starting a charging session

**LTE socket model:** Grab a charging cable and plug each end into their respective ports.

**LTE tethered model:** Plug the attached charging cable into your car port.

## 2 Stopping a charging session

The charging sessions can be terminated either by the car or the charger.

- To stop charging via the car please consult your car manual.
- To stop charging via the charger, simply remove the charging plug from the port

## 3 Changing the charging speed

Before plugging the charging cable into the car, press the silver button on the right side of the charger to adjust the charging speed.

# How to program unit

## 1 Restart the charging unit

Within 1 minute after restarting the charging unit, press the silver button on the right hand side of the charger 3 times consecutively (must be pressed within 10 seconds).

*Please note that after 1 minute from restarting, and the silver button is not pressed 3 times consecutively, the charging unit will continue with its normal booting process.*

## 2 Charging current interface

The charger interface will switch to a current switching interface, starting at 32 Amps, and will go down to 6 Amps before returning to 32 Amps. To change the current, please press the same silver button as before.

*The current will be changed in 1 Amp intervals.*

## 3 Finalising new charging limit

In order to finalise the new charging limit, the charging unit will begin a 20 second countdown once you have chosen your new charging limit.

*Please note that you will not have redo this process when restarting the charging unit unless a new charging limit is required/requested.*

OCULAR

CHARGE WITH VISION